

# SM110Module

User Guide V1.22

---

## USING THE UNIT SAFELY

### INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About  WARNING and  CAUTION Notices.

 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. *Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

※About the Symbols

	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.

#### WARNING

-  Please connect the power plug with ground protected power outlet.
-  Do not open (or modify in any way) the unit or its AC adapter.
-  Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so).
-  Never use or store the unit in places that are: Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are damp (e.g., baths, washrooms, on wet floors); or are humid; or are exposed to rain; or are dusty; or are subject to high levels of vibration.

 When using the unit with a rack or stand, the rack or stand must be carefully placed so it is level and sure to remain stable. If not using a rack or stand, you still need to make sure that any location you choose for placing the unit provides a level surface that will properly support the unit, and keep it from wobbling.

---



Be sure to use only the AC adapter supplied with the unit. Also, make sure the line voltage at the installation matches the input voltage specified on the AC adapter's body. Other AC adapters may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock.



Use only the attached power-supply cord. Also, the supplied power cord must not be used with any other device.



Do not excessively twist or bend the power cord, nor place heavy objects on it. It can damage the cord, producing severed elements and short circuits. Damaged cords may cause fire and shock hazards!



This unit, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an audiologist.



Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.



Immediately turn the power off and remove the AC adapter from the outlet when:

- The AC adapter, the power-supply cord, or the plug has been damaged.
- Smoke or unusual odor occurs.
- Objects have fallen into, or liquid has been spilled onto the unit.
- The unit has been exposed to rain (or otherwise has become wet).
- The unit does not appear to operate normally or exhibits a marked change in performance.



In Households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit.



Protect the unit from strong impact. (Do not drop it!)



Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through.

 CAUTION
---



The unit and the AC adapter should be located so their location or position does not interfere with their proper ventilation.



Always grasp only the plug on the AC adapter cord when plugging into, or unplugging from, an outlet or this unit.

---



---

At regular intervals, you should unplug the AC adapter and clean it by using a dry cloth to wipe all dust and other accumulations away from its prongs. Also, disconnect the power plug from the power outlet whenever the unit is to remain unused for an extended period of time. Any accumulation of dust between the power plug and the power outlet can result in poor insulation and lead to fire.



Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of reach of children.



Never climb on top of, nor place heavy objects on the unit.



Never handle the AC adapter or its plugs with wet hands when plugging into, or unplugging from, an outlet or this unit.



Before moving the unit, disconnect the AC adapter and all cords coming from external devices.



Before cleaning the unit, turn off the power and unplug the AC adapter from the outlet.



Whenever you suspect the possibility of lightning in your area, disconnect the AC adapter from the outlet.



Keep any caps you may remove and the included wing bolts in a safe place out of children's reach, so there is no chance of them being swallowed accidentally.

IMPORTANT NOTES!
------------------

## Power supply

- Do not connect this unit to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter (such as a refrigerator, washing machine, microwave oven, or air conditioner), or that contains a motor. Depending on the way in which the electrical appliance is used, power supply noise may cause this unit to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this unit and the electrical outlet.
- The AC adapter will begin to generate heat after long hours of consecutive use. This is normal, and is not a cause for concern.
- Before connecting this unit to other devices, turn off the power to all units. This will help prevent malfunctions and/or damage to speakers or other devices.

## Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
  - This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
-

- 
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
  - Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.
  - When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.

## **Maintenance**

- For everyday cleaning, wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

## **Other attentions**

- Please be aware that the unit's memory can be irretrievably lost as a result of a malfunction, or the improper operation of the unit.
  - Please take care when using the unit's buttons or other controls, and when using its jacks and connectors. Rough handling can lead to malfunctions.
  - Never strike or apply strong pressure to the display.
  - When connecting/disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
  - To avoid disturbing your neighbors, try to keep the unit's volume at reasonable levels. You may prefer to use headphones, so you do not need to be concerned about those around you.
  - Since sound vibrations can be transmitted through floors and walls to a greater degree than expected, take care not to allow such sound to become a nuisance to neighbors, especially at night and when using headphones.
  - When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.
  - Some connection cables contain resistors. Do not use cables that incorporate resistors for connecting to this unit. The use of such cables can cause the sound level to be extremely low, or impossible to hear.
-

---

# Contents

## 1. Introduction

1.1 SM110 Components .....	1
1.1.1 Top and rear panels .....	1
1.1.2 Jack panel .....	2
1.2 SM110 Basic Concepts and operations .....	2
1.2.1 Drum Kit Mode .....	2
1.2.2 Click Mode .....	2
1.2.3 Song Mode .....	2
1.2.4 Recording Mode .....	3
1.2.5 Power Off .....	3

## 2. Advanced Settings

2.1 Selecting Volume and Triggering Parameters .....	3
2.2 Setting Metronome .....	4
2.3 MIDI-related Settings .....	5
2.4 Restoring the factory settings .....	5



---

---

## 1. Introduction

### 1.1 SM110 Components

#### 1.1.1 Top and rear panels

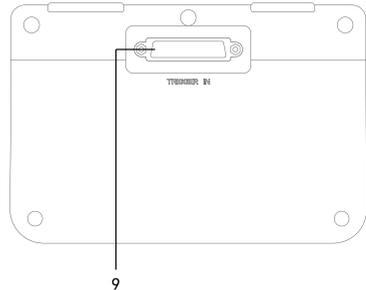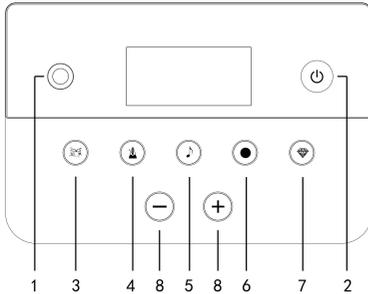

#### 1. Volume Knob

Adjust the output volume of the PHONE jack.

#### 2. Power button

Turns the power on/off.

#### 3. DRUM button

When this button light is on, press [ + ] / [ - ] to switch drum kits.

#### 4. CLICK button

When the button light is on, the tempo can be adjusted by press [ + ] / [ - ]. Pressing MULTI button to turn metronome on/off.

#### 5. SONG button

When the button light is on, press [ + ] / [ - ] to choose song. Press MULTI button to play or stop a song.

#### 6. REC button

When the button light is on, start to record your playing. Press MULTI button to play the recording.

#### 7. MULTI button

Short press this button to play or stop metronome and song, long press this button to enter advanced Settings.

#### 8. [ + ] / [ - ] buttons

Use these buttons to switch drum kits, adjust tempo of metronome, choose song, etc.

#### 9. Trigger Input connector

Connecting the special cable connects the pads and pedals to the module.

---

## 1.1.2 Jack panel



### 1.DC IN jack

Connect the included AC adapter here.

### 2.USB jack

Use as MIDI device to connect PC.

### 3.AUX jack

Use for connecting an external audio source such as cellphone, iPad/PAD and MP3.

### 4.PHONE

Use for connecting stereo headphones, amp, or other external audio equipment.

## 1.2 SM110 Basic Concepts and Operations

### 1.2.1 Drum Kit Mode

Press [DRUM] button to enter drum kit mode.



The [DRUM] button light is on. P01 is the default drum kit mode.

- ◇ Choose drum kit with [+]/[-] buttons.
- ◇ Press [MULTI] button to open metronome. The [CLICK] button light flashes according to the metronome.
- ◇ Press [MULTI] button again to stop metronome. The [CLICK] button light is off.

### 1.2.2 CLICK Mode

Press [CLICK] button, enter into CLICK mode.



The [CLICK] button light is on.

- ◇ Using [+]/[-] buttons to adjust the tempo.
- ◇ The tempo range is 20–300.
- ◇ Press [MULTI] button to open metronome. The [CLICK] button light flashes according to the metronome. Press [MULTI] button again to stop metronome. The [CLICK] button light returns on.

### 1.2.3 Song Mode

Press [SONG] button to enter into Song mode.



[SONG] button light is on.

- ◇ Using [+]/[-] button to choose song.
- ◇ Press [MULTI] button to play the song. Press [MULTI] button again to stop the playing.

- ◇ The [MULTI] button light is on when playing song, and it is off when stop the playing.
- ◇ In the Song screen, press [SONG] to mute the drum, the “Song mute” screen appears, press the SONG again to revert.



**Tip**

- ※ When playing a song, the tempo of the song can be adjusted by changing the tempo of metronome.
- ※ When switch songs, the tempo of metronome will follow the tempo changes of songs.

### 1.2.4 Recording Mode

Press [REC] button to enter into recording mode.



The [REC] button light is on, the metronome is automatically opened. Ready for recording.

- ◇ Play the drum kit to begin recording. Press [REC] button again to stop recording. This time the screen displays the tempo.
- ◇ Press [MULTI] button to replay the recording.
- ◇ Press [MULTI] button while recording, the recording stops and replays.
- ◇ If the screen says “no” when press [MULTI] button, it indicates there is no recording file.

**Tip**

- ※ After recording, when you switch to other function interface, the recording data will be deleted.
- ※ If the maximum number of notes (5000) is exceeded, the recording will stop automatically.

### 1.2.5 Power Off

1. Turn the volume down on the SM110 and any connected equipment.
2. Hold down [POWER] button until the screen indicates “POWER OFF”.
3. Release [Power] button.

## 2. Advanced Settings

### 2.1 Setting Volume and Triggering Parameters

1. Press [DRUM] button, enter into Drum Kit Mode.
2. Press [MULTI] button more than 2 seconds, enter into pads volume setting interface. At this time, the [DRUM] button light flashes. (The defaulted pad for adjusting is kick. )
3. Hit the pad that need to set. Using [+] / [-] button to edit the value.
4. Press [DRUM] button again to switch to triggering parameters setting interface.

Screen	Setting	Value	Description
	Volume	0-127	The volume of each pad
	Triggering Parameters	0-10	The triggering parameters of pads

5.Hit the pads. Using [+][-] button to edit the value.

6.Press [MULTI] button again to save the setting and return back to Drum Kit Mode.

**Tip**

※ This triggering parameters is mainly a combination of sensibility and anti-cross. The larger the value, the more sensitive of the trigger, and the smaller anti-cross.

## 2.2 Setting Metronome

The tempo and time scope can be changed.

2.Press [MULTI] button more than 2 seconds, the metronome setting interface appears.

1.Press [CLICK] button, enter into metronome interface.

3.Press [CLICK] button, switch to the setting page that you want to set.

Screen	Setting	Value	Description
	Beats	b01-b09	Set the beats
	Rhythm	Whole note 1/2 note 1/4 note 1/8 note Eight-note triple 1/16 note	Set the time scope of beat
	Volume	u01-u10	Set the volume of CLICK

4.Using [+][-] button to change the value.

5.Press [MULTI] button again to save the setting and return back to metronome interface.

---

## 2.3 MIDI –related Settings

- 1.Press [SONG] button, enter into Song interface.
- 2.Press [MULTI] button more than 2 seconds, MIDI Setting interface appears.
- 3.Hit the pad that need to set. Using [+] [-] button to edit the MIDI key value of pads (0–127).

- 4.Press [MULTI] button again to save the setting and return back to Song Mode.

### Tip

- ※ In case of the MIDI key value of head shot and rim shot of pad are same, it will always appear sound of head when hit both head and rim.

 
### MIDI Code (The default value)

Pads	Key Value
Bass Drum	36
Snare Head Shot	38
Snare Rim Shot	40
Tom1 Head Shot	48
Tom2 Head Shot	45
Tom3 Head Shot	43
Crash Head Shot	49
Crash Rim Shot	55
Ride Head Shot	51
Ride Rim Shot	59


Pads	Key Value
Open Hi–hat Head Shot	46
Open Hi–hat Rim Shot	26
Close Hi–hat Head Shot	42
Close Hi–hat Rim Shot	22
Close Hi–hat Pedal	44
Half–close Hi–hat Head Shot	23
Half–close Hi–hat Rim Shot	24
Snare X–stick	37
Ride Bell Shot	69
Hi–hat Splash	99

## 2.4 Restoring the factory settings

- 1.Hold down [+] button when power off, and press Power button at the same time.



 - 2.Release [+] button when the screen displays as above.



- 3.This time the screen displays as above Press [MULTI] button to restore the factory settings.The screen starts flashing until finishing.

